

Chevy Colorado


2012-2018

Install Instructions

- 1. Move passenger front seat all the way forward and remove headrest from rear passenger seat. Lay the rear driver side seat down.**
- 2. Place lower side screen between the rear seats. Place the rear passenger side headrest in the headrest bracket and back into the seat.**
- 3. Loosely attach the headrest bracket to the lower side screen.**
- 4. Place the foam barrier on top of the upper side screen and secure using zip ties.**
- 5. Place the upper side screen on top of the lower side screen and loosely bolt together.**
- 6. Attach B pillar bracket to front screen.**
- 7. Loosely attach the seat rail bracket to the front screen.**
- 8. Place front screen in vehicle, attach foam barrier to front screen and loosely attach to side screen.**
- 9. Remove rear passenger grab handle and install B pillar bracket.**
- 10. Using the 1" tap screw provided screw seat rail bracket into seat rail.**

**Chevy Colorado
2012-2018
Install Instructions**


11. Tighten all fasteners.

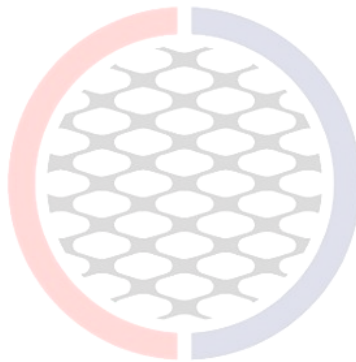

CUSTOM CAGE

Custom Cage
6102 N 23rd Street
Ozark, MO 65721
(605) 642-7609
WWW.POLICECAGES.COM

Chevy Colorado 2012-2018 Install Instructions

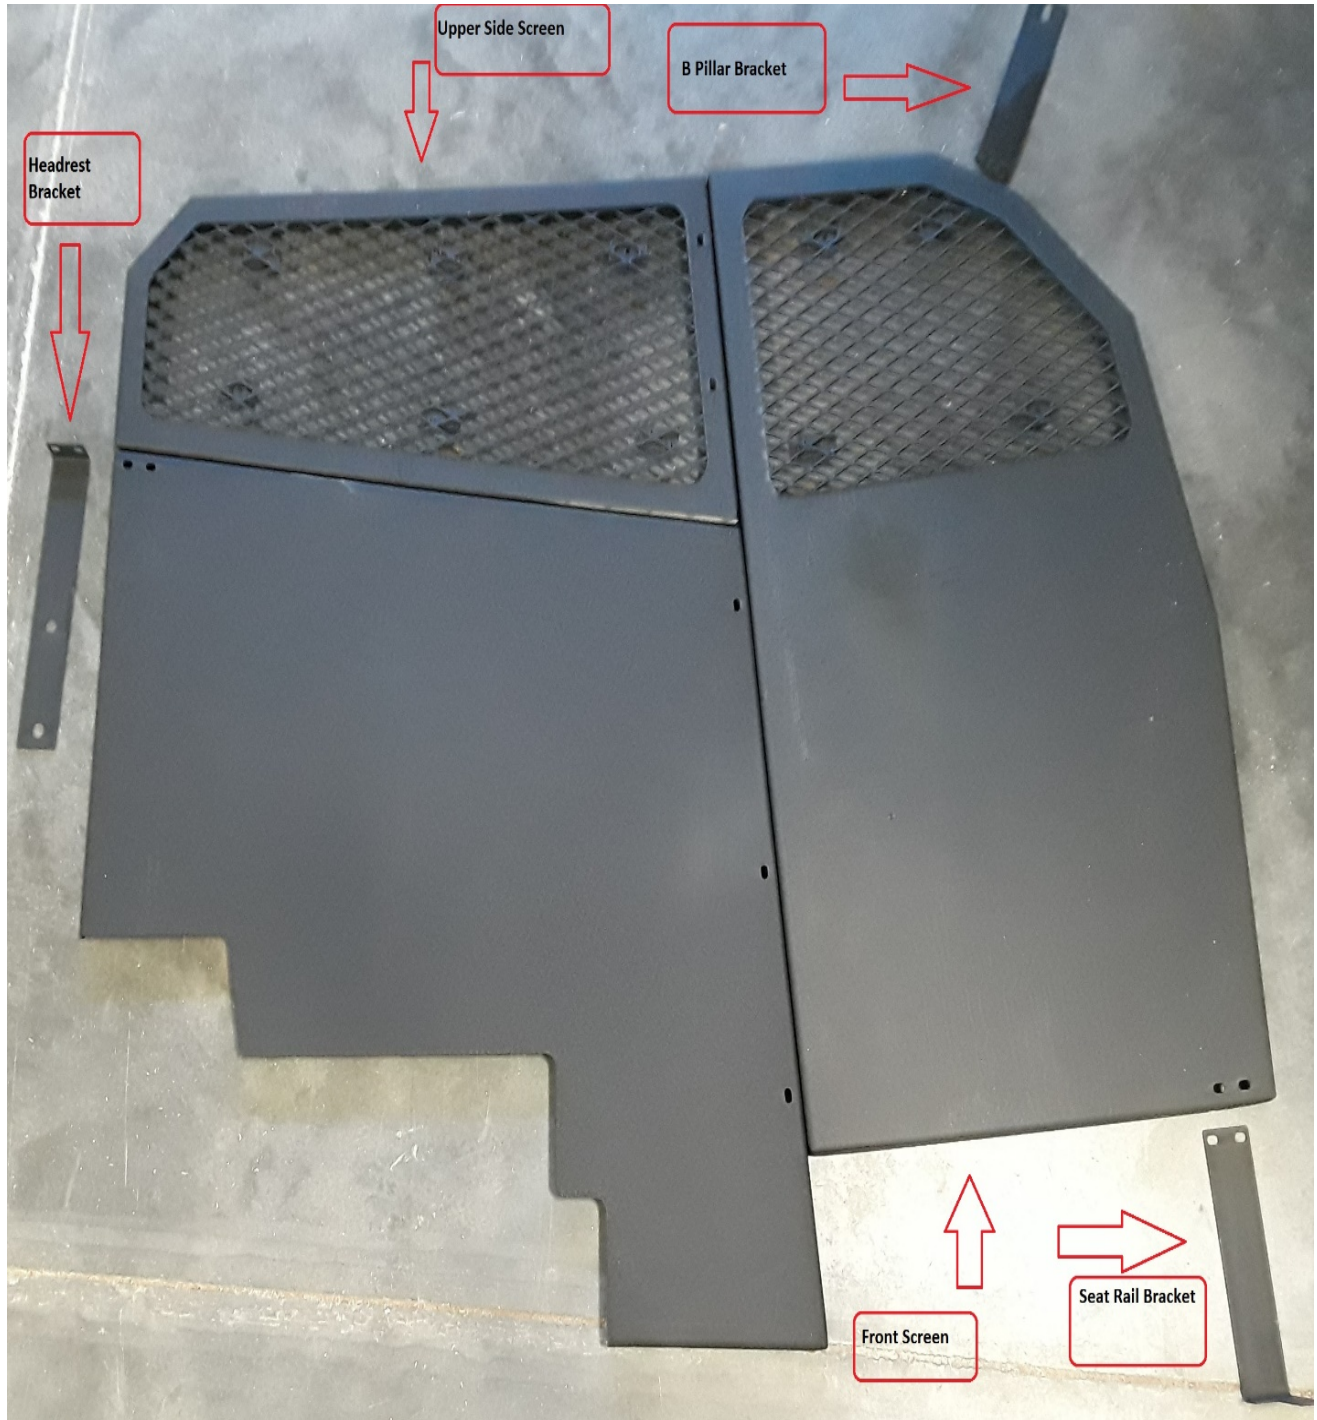

Custom Cage
6102 N 23rd Street
Ozark, MO 65721
(605) 642-7609
WWW.POLICECAGES.COM