


Dodge Charger Install Instructions

2015+

1. Remove the prisoner and center cargo hook plastic covers.
2. Remove passenger side pillar post plastic and the top bolt for the seat belt adjuster bar.
3. Remove the right rear seat rail bolt from passenger seat.
4. Install the rear window bracket bar between the cargo hooks. Factory holes are behind the cargo hooks. (may have to ream the holes slightly.) Fasten with washers and nut from the trunk side. Loosely install the rear window bracket to the cross bar.
5. Assemble the side screen and front screen together.
6. Install the upper bracket to the front screen facing forward.
7. Install the foam tube to the area of the roof line. Loosely install the floor bracket under the seat rail and replace the bolt.
8. Place the partition in the vehicle and loosely install the upper front bracket behind the seatbelt adjuster rail and replace the bolt to hold in place.
9. Install the bolts to fasten the rear window bracket to the rear side screen. (3ea)
10. Install the plated floor bracket to the side and front screen. (3 bolts)
11. Install the seat rail bracket to the lower right section of the front screen. Check alignment and tighten ALL fasteners. Finish installing foam tube.

Dodge Charger Install Instructions

2015+

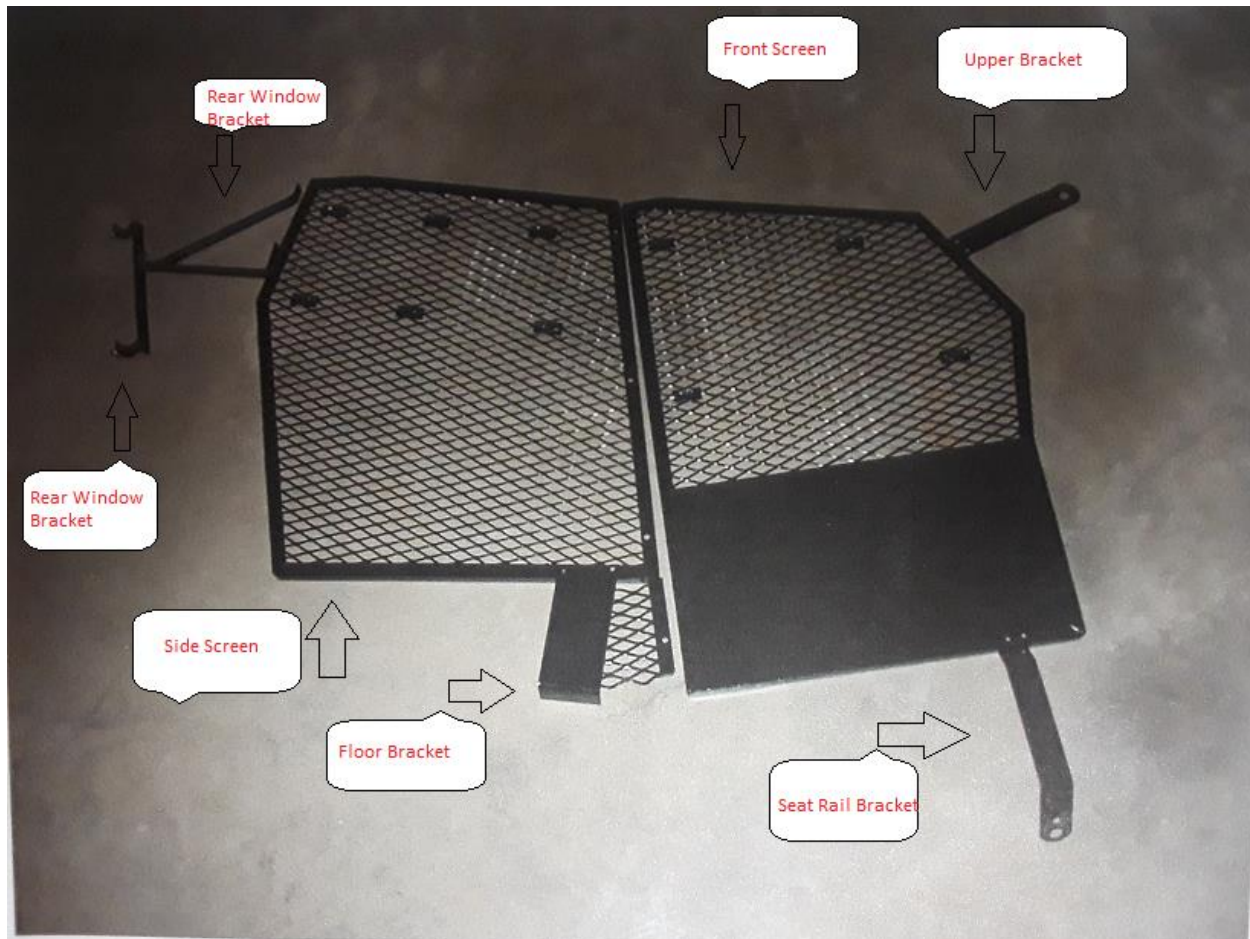

CUSTOM CAGE