

Ford Explorer PPU SUV/Bicycle


2011-2017

Parts List

- A. Floor Bracket
- B. Upper Front Screen Bracket
- C. Cargo Barrier Bracket (Driver Side)
- D. Cargo Barrier Bracket (passenger Side)

- E. Driver Side Inner Molding Bracket
- F. Seat Rail Bracket
- G. Side Screen
- H. Cargo Barrier
- I. Front Screen
- J. Foam Tube
- K. Bolts x 16
- L. Lock Washer x 16

- M. Nuts X 16
- N. 1" Tap Screw
- O. Barrier Foot Bracket

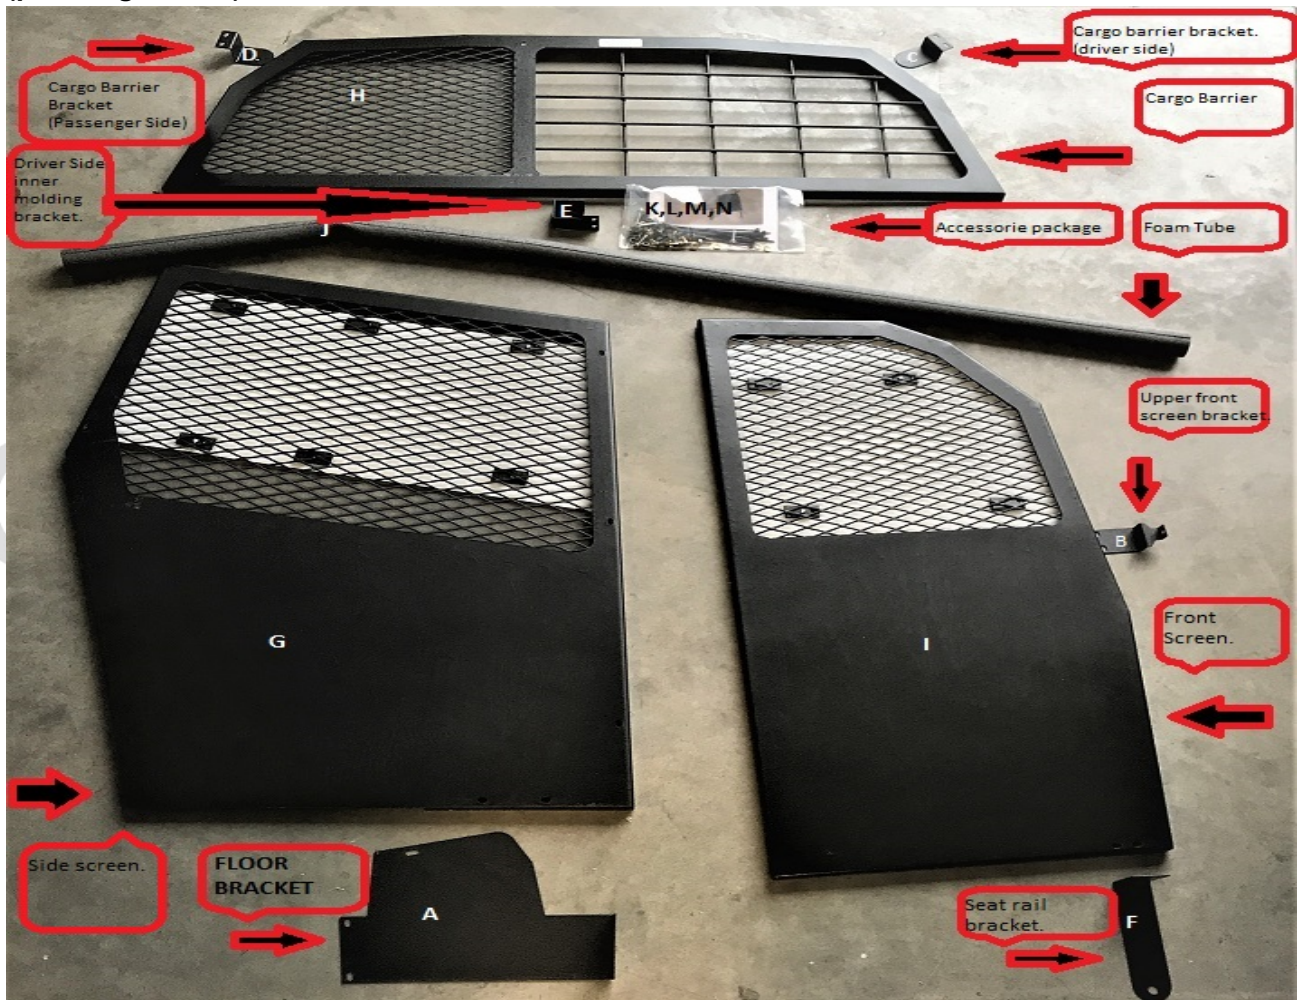

Ford Explorer PPU SUV

2011-2017

Install Instructions

1. Loosely install cargo barrier bracket (D) to the cargo barrier (H) passenger side. "LOGO" on cargo barrier faces front of vehicle.



figure B)
attach foot

2. Loosely install lower cargo barrier foot bracket. (see
3. Place cargo barrier inside rear of vehicle and loosely bracket to rear seat bolt. (second bolt in from passenger side)
4. Install cargo barrier to the passenger side "C" pillar with tap screw. **DO NOT OVER TIGHTEN!** (NOTE: PASSENGER/PRISONER SIDE HAS VERY THIN METAL BEHIND THE PLASTIC. USE CAUTION WHEN INSTALLING BRACKET.)
5. Move passenger side front seat all the way forward. Place side screen (G) between the rear seats and attach to cargo barrier (H).
6. Install floor bracket (A) to bottom inside of side screen (G).
7. Remove outside rear seat rail bolt and install floor bracket (A). Do not tighten until end.
8. Remove rear passenger grab handle, replace top bolt, install upper front screen bracket (B) in lower hole. Do not tighten until the end. See figure C.
9. Install foam tube (J) on top of front screen (I) and down the side until reaching the pre-drilled holes for upper front screen bracket (B).
10. Attach front screen (I) to side screen (G).
11. Attach upper and lower brackets to front screen.
12. Tighten all bolts. Finish lining the front screen with foam tube, use zip ties to secure.

Figure A

Figure B

Completed

